




1. Print a copy of the drawing related to your car and check the dimensions both vertically and horizontally to confirm it has been printed to scale. Cut the drawing just outside the dashed line.

2. Glue the drawing to a stiffer piece of material such as cardboard to make it easier to use. Cut the cardboard directly along the dashed line.

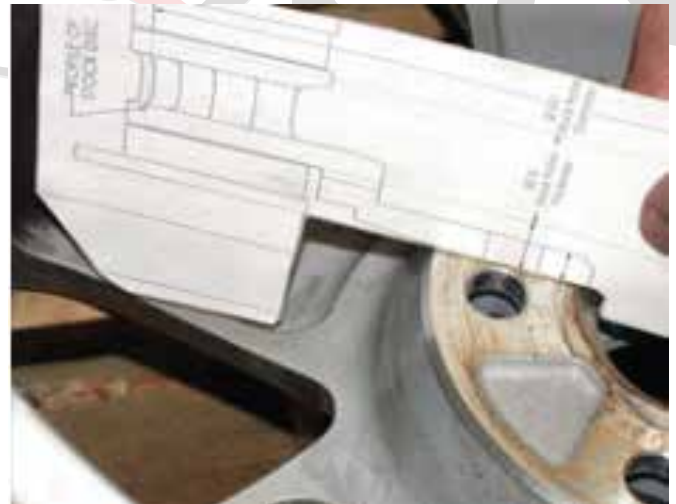

3. Lay the template resulted inside the wheel.

4. Verify that the edge of the caliper does not touch the rim or any of the spokes. We recommend a minimum of 2mm clearance.

If the template is rubbing against your wheel, you might need different wheels or wheel spacers. The use of wheel spacers is at your discretion. Typically, a properly made wheel spacer of 5mm will not adversely affect the vehicle.

Before utilising a wheel spacer make sure you consider the wings / arches clearance.

Wheel fitment and the use of spacers with the TORQEN Big Brake Kits are at the entire responsibility of the customer.